



Available for:

BLETS8, BLETS8AE, BLES8,
BLCS (-2), BLC4

Knit Woven Single Fold Bias Binder

Item No: D13-3-12E (32mm)
D13-3-15E (40mm)

Knit Woven Single Fold Bias Binder Stitches used:

Left, Center, or Right Chain Stitch
Narrow Left or Right Cover Stitch
Wide Cover Stitch
Triple Needle Cover Stitch

Application:

This single fold bias binder for the Baby Lock Coverstitch machines is a great attachment for binding your project edges.

Fabric and Cutting Instructions:

For binding strips on single knits,
cut crosswise grain of fabric.

For binding strips on woven fabrics,
cut strips on the bias grain of fabric.

For the 12mm binder - cut strips 32mm wide.

For the 15mm binder - cut strips 40mm wide.

Edge position adjustment:

Loosen screws a and b, set the attachment to the desired position for fabric edge.

Machine setting:

Stitch length: 3-4

Sewing speed: Moderate to slow.

Sewing Instructions:

1. With the wrong side of the fabric facing you, feed the binding strips through the serpentine fabric guide and into the binder.
Note: Cut the end of the strip at an angle to help feed it through the binder.
2. Lay the excess fabric strip to the right of the machine, making sure the strip is free of tangles.
3. Keep binding strip flat when feeding into attachment to ensure the fabric edges will roll under when sewing.
4. Pull binding strips out of the end of the binder and pivot the strip 90° to place it under the foot.
5. Make sure the binding strip is still folded when placing under the presser foot.
6. Feed the project to be bound along the left end of the attachment into the folded bias and under the presser foot.

【Caution】

When attaching and detaching this binder to the sewing table, be sure to turn OFF the power of the sewing machine.

This binder should be attached to the sewing table with two screws tightly so as not to move.

Moving the binder while it is attached can cause scratches on the surface of the resin sewing table and covers.

