



**Available for:**

BLETS8, BLETS8AE, BLES8,  
BLCS(-2), BLC4

## **Knit Woven Double Fold Bias Binder**

**Item No: D13-4-08E (8-30mm)**  
**D13-4-10E (10-36mm)**  
**D13-4-12E (12-42mm)**  
**D13-4-15E (15-48mm)**

### **Knit Woven Double Fold Bias Binder Stitches used:**

Left, Center, or Right Chain Stitch  
Narrow Left or Right Cover Stitch  
Wide Cover Stitch  
Triple Needle Cover Stitch

### **Application:**

This double fold bias binder for the Baby Lock Coverstitch machine is a great attachment for binding your project edges.

### **Fabrics and Cutting Instructions:**

For Binding strips on single knits, cut crosswise grain on fabric.  
For binding strips on woven fabrics, cut strips on the bias grain of fabric.  
For the 8mm binder - cut strips 30mm wide.  
For the 10mm binder - cut strips 36mm wide.  
For the 12mm binder - cut strips 42mm wide.  
For the 15mm binder - cut strips 48mm wide.

### **Machine setting:**

Stitch length: 3-4  
Sewing speed: Moderate to slow.

### **Sewing Instructions:**


1. With the wrong side of the fabric facing you, feed the binding strips through the serpentine fabric guide and into the binder.  
Note: Cut the end of the strip at an angle to help feed it through the binder.
2. Lay the excess fabric strip to the right of the machine, making sure the strip is free of tangles.
3. Keep binding strip flat when feeding into attachment to ensure the fabric edges will roll under when sewing.
4. Pull binding strips out of the end of the binder and pivot the strip 90° to place it under the foot.
5. Make sure the binding strip is still folded when placing under the presser foot.
6. Feed the project to be bound along the left end of the attachment into the folded bias and under the presser foot.

### **[Caution]**

**When attaching and detaching this binder to the sewing table, be sure to turn OFF the power of the sewing machine.**

**This binder should be attached to the sewing table with two screws tightly so as not to move.**

**Moving the binder while it is attached can cause scratches on the surface of the resin sewing table and covers.**

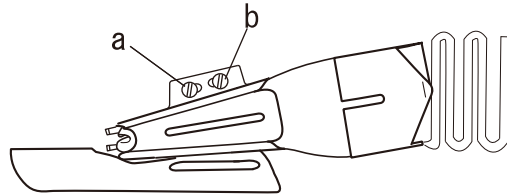

### **Edge position adjustment:**

Loosen screws a and b, set the attachment to the desired position for fabric edge.

