



**baby lock**

## Open Toe Foot

Item No: **B5002T20A**


### Available for:

BLETS8, BLETS8AE, BLES8,  
BLE8W-2, BLE8W, BLE8,  
BLE8-2, BLE5, BLE5-2,  
BLE5-3

The wide opening in the front of this foot makes it perfect for projects that require extra visibility such as aligning stitching lines on hems and decorative cover stitching.

Stitch type:	2,3 or 4-thread overlock Single chain, double or triple needle coverstitch
Needles:	Overlock 1 or 2 Cover/Chain 1,2 or 3
Stitch width:	Any
Stitch length:	Any
Upper knife:	Engaged or disengaged
Differential feed:	0,6 to 2
Sewing speed:	Normal

The red markings on the toe of the foot are seam line guides. They indicate the needle positions to help guide your fabric for accurate seaming.

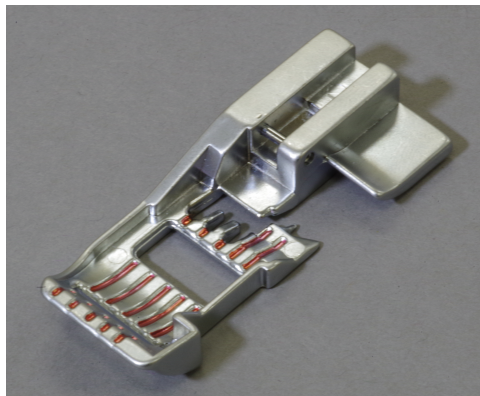

#### To Release:

1. Raise the presser foot lever.
2. Lower the cutting blade.
3. Raise the needles to the highest position.
4. Push the presser foot release lever located at the back of the presser foot.
5. Carefully turn the presser foot clockwise 90 degrees.
6. Slide the presser foot to the rear to remove.

#### To Replace:

1. Raise the presser foot lever.
2. Lower the cutting blade.
3. Raise the needles to the highest position.
4. Slide the foot from the left to right.
5. Align the bar of the foot with the groove in the holder.
6. Lower the presser foot lever to snap into place